

For 36" High Rail and Maximum 42" Wide Gate Opening


- **PREPARE RAILS:** Cut top and bottom rail 1-3/4" smaller than opening of gate posts. Be sure picket holes are the same distance in from both ends and no closer than 2" from end.
- **INSTALL PICKETS:** Install pickets into top and bottom rail holes. (Bottom rail has weep holes)
- **ATTACH TO SIDE RAILS:** Slide top and bottom rails into side rail holes a full 1-7/8 inches.
- Drill 3/16 inch in center of hard points thru vinyl top and bottom rail (about 1-1/2 inch into hard point). Install 6 inch TimberLok screw tight to hard point and thru top and bottom rail.
- **HINGES TO GATE:** Install hinges on one side rail with 2" x 4" side of hinge aligned with top and bottom rail (see drawing). Predrill holes with 3/16 inch drill bit. Align barrel for hinge with edge of side rail.
- **GATE LATCH STOP:** Install gate latch stop where shown on drawing, centered 7/16 inch down from bottom of top rail. Predrill 1/8" holes for screws thru latch stop.
- **ATTACH GATE:** Center gate in opening with temporary blocks under to ensure it is level. Install screws thru hinges into hinge post. Predrill 3/16 inch holes.
- **POST LATCH:** Install gate latch on latch post predrilling 1/8 inch holes. Be sure latching lever is on top and latch is centered on latch stop. Keep latch flush with gate side of post.
- **RAIL CAPS:** Install vinyl caps on top and bottom of side rails with four drops of glue on the inside corners of the caps.

PARTS

- 1 – Top rail vinyl
- 1 – Bottom rail vinyl
- 2 – Side rails vinyl

- 1 – Pair hinges with screws
- 1 – Latch with screws
- 7 – Pickets vinyl

- 4 – 6" TimberLok screws
- 4 – 2" x 3.5" vinyl caps
- 1 – Tube of glue

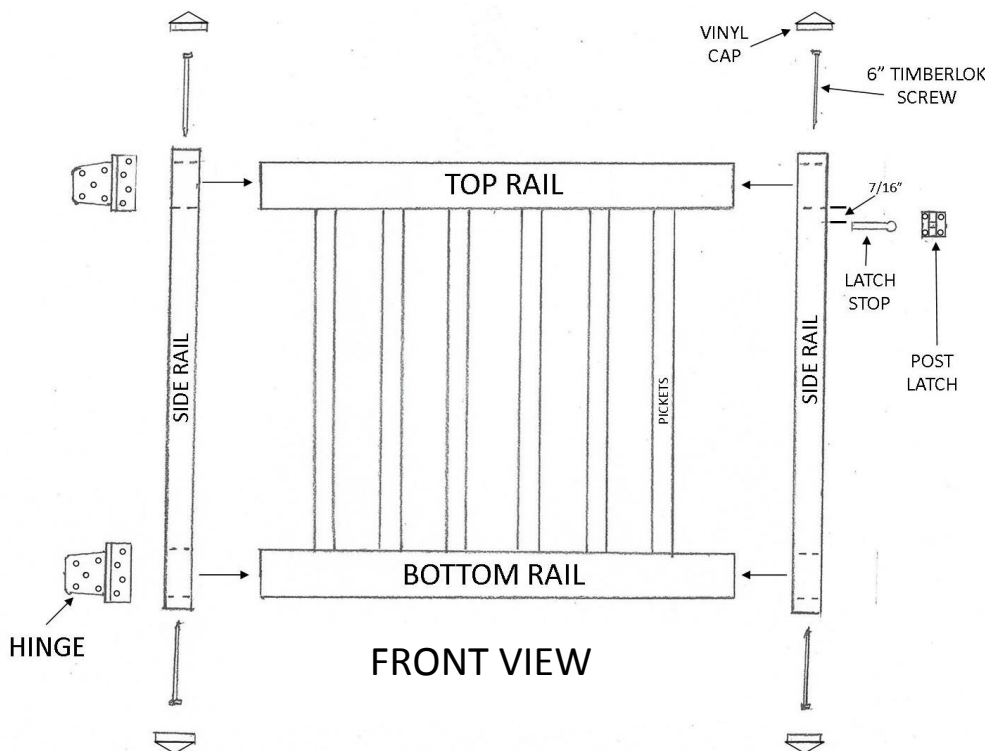

\$185.00 Each
AVAILABLE IN WHITE ONLY
 Cut to fit gate opening up to
 42" wide.
 Free Shipping in Continental
 U.S.A.

